

HOW TO MEASURE YOUR ROMAN BLINDS

TIPS BEFORE YOU START

- Use the right tools, such as a metal tape measure or a rigid measuring rule, so you can measure accurately in one go.
- Measure more than once to avoid mistakes.
- Take window sills, window handles and heating pipes into account. It is important that the roman blinds can hang freely.
- Also take the system height and stack height into account in relation to any obstacles, such as inward-opening windows and doors.

MEASUREMENTS FOR YOUR ROMAN BLIND


Width in cm

.....

Height in cm


.....

MEASURING THE WIDTH AND HEIGHT "INSIDE THE RECESS"

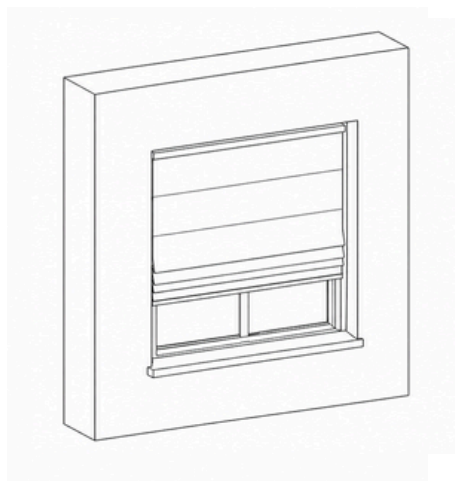

OPTION 1. INSIDE THE RECESS


The roman blind is fitted inside the window recess, between the window frame.

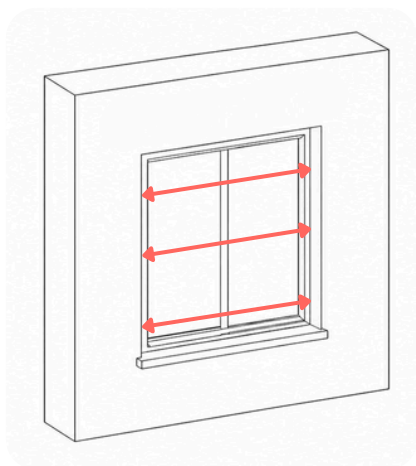

STEP 1. MEASURE THE WIDTH OF THE ROMAN BLIND

Measure the width of the window frame in 3 places: at the top, in the middle and at the bottom.

Enter the narrowest width measurement. We will automatically deduct 1 cm so that the roman blind fits properly inside the window frame. You do not need to make any deduction yourself.

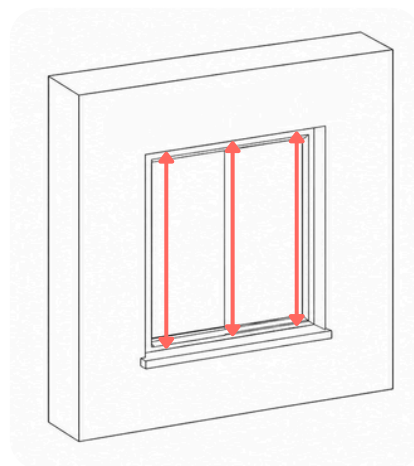


STEP 2. MEASURE THE HEIGHT OF THE ROMAN BLIND

Measure the height of the window frame in 3 places: on the left, in the middle and on the right.


Enter the shortest height measurement. We will automatically deduct 0.5 cm so that the roman blind can move freely. You do not need to make any deduction yourself.

MEASURING THE WIDTH AND HEIGHT "OUTSIDE THE RECESS"

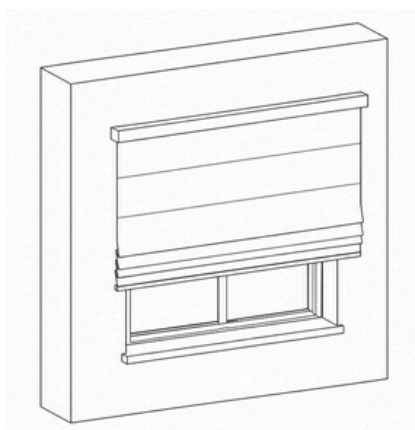


OPTION 2. OUTSIDE THE RECESS

The roman blind is fitted to the window frame or wall. Take into account how much overlap you would like at the sides, top and bottom.

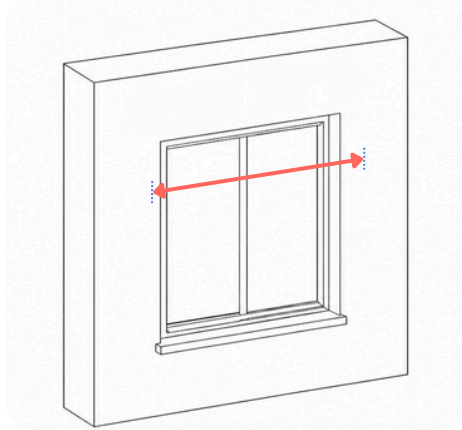

STEP 1. MEASURE THE WIDTH OF THE ROMAN BLIND

Measure your desired width. Decide how far you would like the roman blind to overlap the window recess on each side.

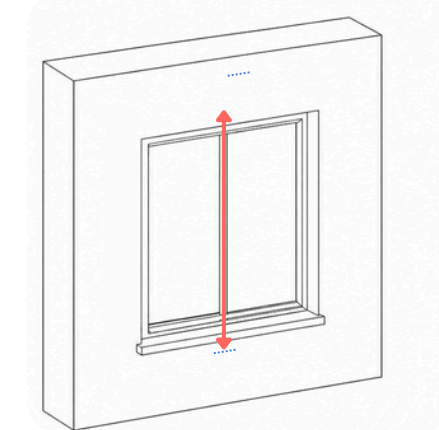

STEP 2. MEASURE THE HEIGHT OF THE ROMAN BLIND

Measure your desired height.

SMARTBLINDS